





FLAME ARRESTORS

Flame arrestors are used to arrest the flame from reaching the highly dense area of fuel, in case of backfire & thus avoid accident & explosions.

Type	Maximum Working Pressure	End Medium	Medium
 V-9102	17 bar	1/2" BSP INT / EXT as per requirement	LPG, Natural Gas
 V-9106	17 bar	1" - 2" BSP INT / EXT as per requirement	LPG, Natural Gas